

# Combi Oven Instructions

Check that gas and electricity are on at the wall. The gas switch is off if it has been pushed in.



To turn on the oven - Press and hold the stop/start button until the display lights up. (Approximately 5 seconds)



Choose the red button for dry heat or the blue button for steam



Set the temperature by turning the dial. Press in to confirm. For steam, the temperature should be set to 100.




Set the timer to have the oven beep after a set period of time, or leave the time dial on inf for 'infinite' time



Press the stop/start button to start heating

Use the extractor fan (switch on wall behind stove) when steaming or cooking foods that have strong fragrances

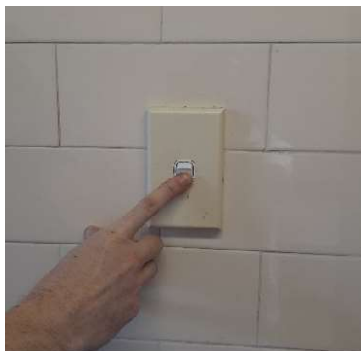

When opening the door, open it so that it is ajar to let the heat escape out the top before fully opening the door



Press the stop/start button to stop the heat

To turn off the oven - Press and hold the stop/start button till the display goes off (Approximately 5 seconds)

Please note that you need to close the door firmly but do not slam

Trouble Shooting – If the oven gives a warning beep when trying to start it, please check that the gas emergency stop switch has not been pressed. To release, turn the switch in the direction of the arrows.