

# Dishwasher Instructions

Trays are stored in the left hand cupboard at the end of the kitchen

With the door shut, press the **on/off** button



Wait for the machine to fill and heat to operating temperature. Once it reaches correct temperature – t at or over 55, the three lights on the left of the display will turn **green** (Please allow approx. 25mins for machine to reach temperature – turn dishwasher on prior to eating so that it's ready when you're finished!)



Press the **P** button and choose Pr 2



Open door, Insert tray – **Please ensure that crockery, cutlery etc has been rinsed prior to placing in the trays**, Close door

Press the start button – the status bar will flash **orange**, indicating operating



End of cycle is displayed by the word **end**



Remove tray and repeat as needed – please ensure that the temperature is at 55 before starting the next load.

Once finished for the meal, press the **on/off** button to switch off unit.

At the end of the day after the final use, please run the drain cycle

Remove the two side filters and close the door



Press the **P** button until **dr** shows



Press start

When the machine turns off replace the side filters