

Dishwasher Instructions

Insert drain plug



Replace grate



Close lid



Press and hold power button until dishwasher turns on



Unit will begin to fill

Once it reaches correct temperature – left number over 60, right number over 85 – thermometer icon will light up (Please allow approx. 15mins for machine to reach temperature)

Lift lid

Insert tray – **Please ensure that crockery, cutlery etc has been rinsed prior to placing in the trays**

Close lid

Once unit stops open lid

Remove tray and repeat

Once cleaning service has finished, hold down power button to switch off unit

At end of stay, remove drain plug and let water drain

PLEASE DO NOT SWITCH THE DISHWASHER OFF AT THE POWER ON THE WALL